


1


When discharge capacity is less though pump starts.

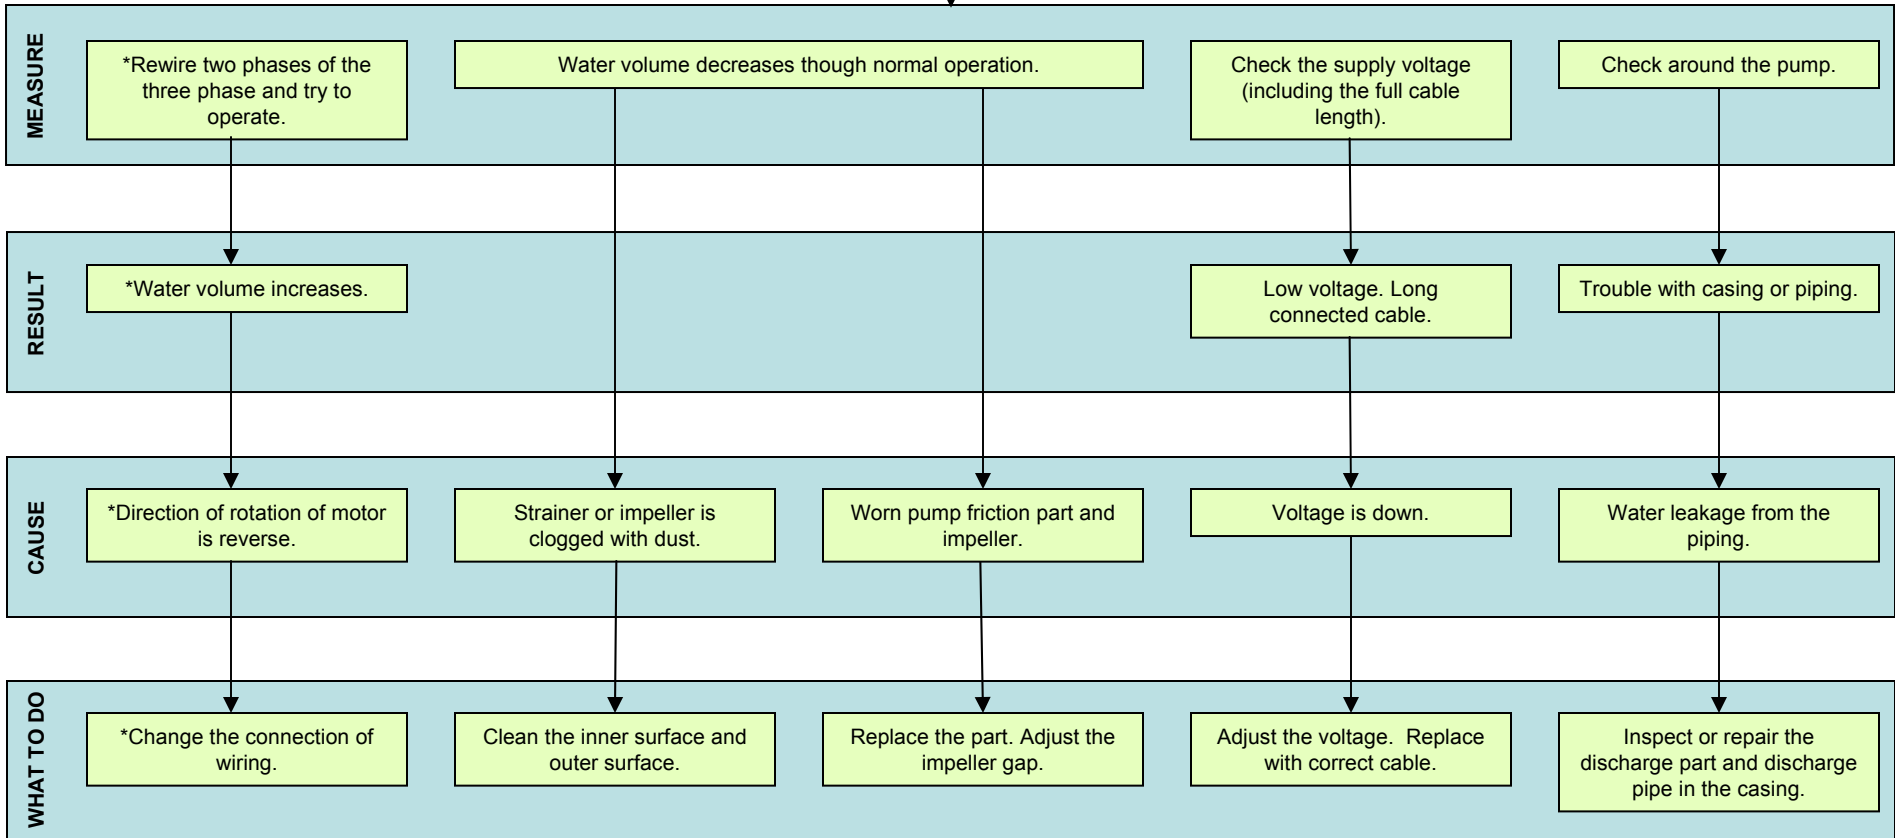

Note: Asterisk (*) shows a case of 50GW.

2

Pump does not rotate.

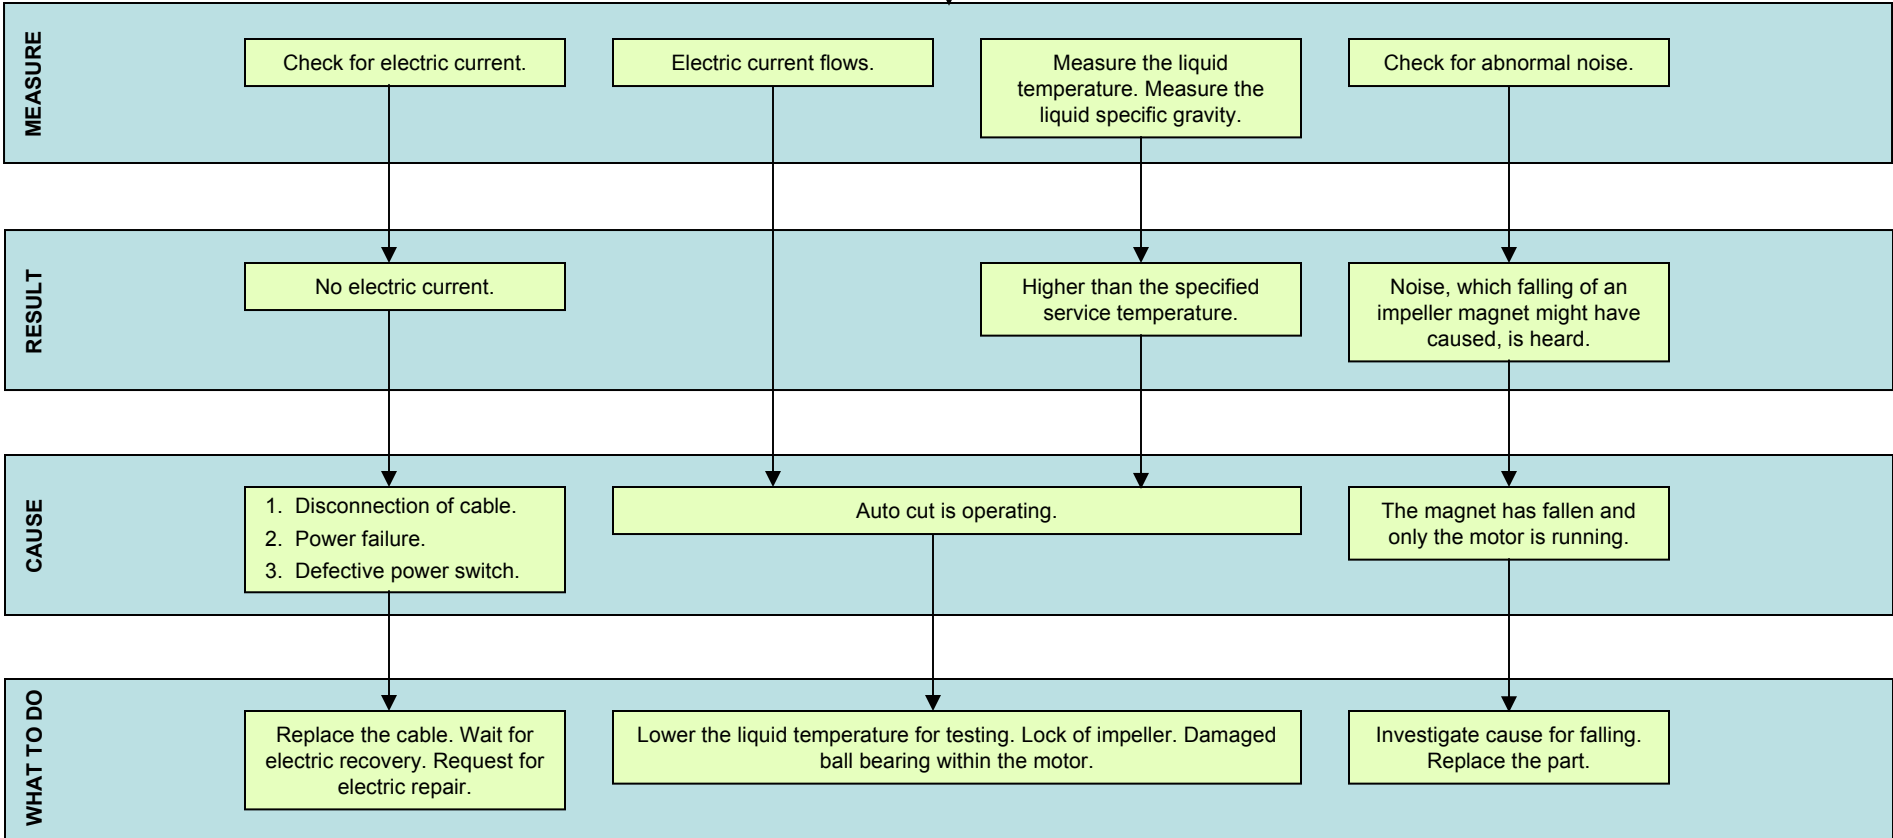

3

Stop and operation are repeated.

